


NOTES:
Dimensions to be checked on site before commencing work.
Any discrepancies shall be reported to the architect immediately.
Do not scale from these drawings except for planning purposes.
Use figured dimensions only.
Where applicable this drawing is to be read in conjunction with other consultants' drawings.
All drawings to be read in conjunction with specification and all other drawings including structural engineer and mechanical and electrical drawings / specification



VIEW OF MAIN ENTRANCE
FOR ILLUSTRATIVE PURPOSES ONLY

DRAWING
3D - MAIN ENTRANCE
SCALE
as noted @ A1
DATE
OCT 2021
REVISION
DRAWING NO
20031-09

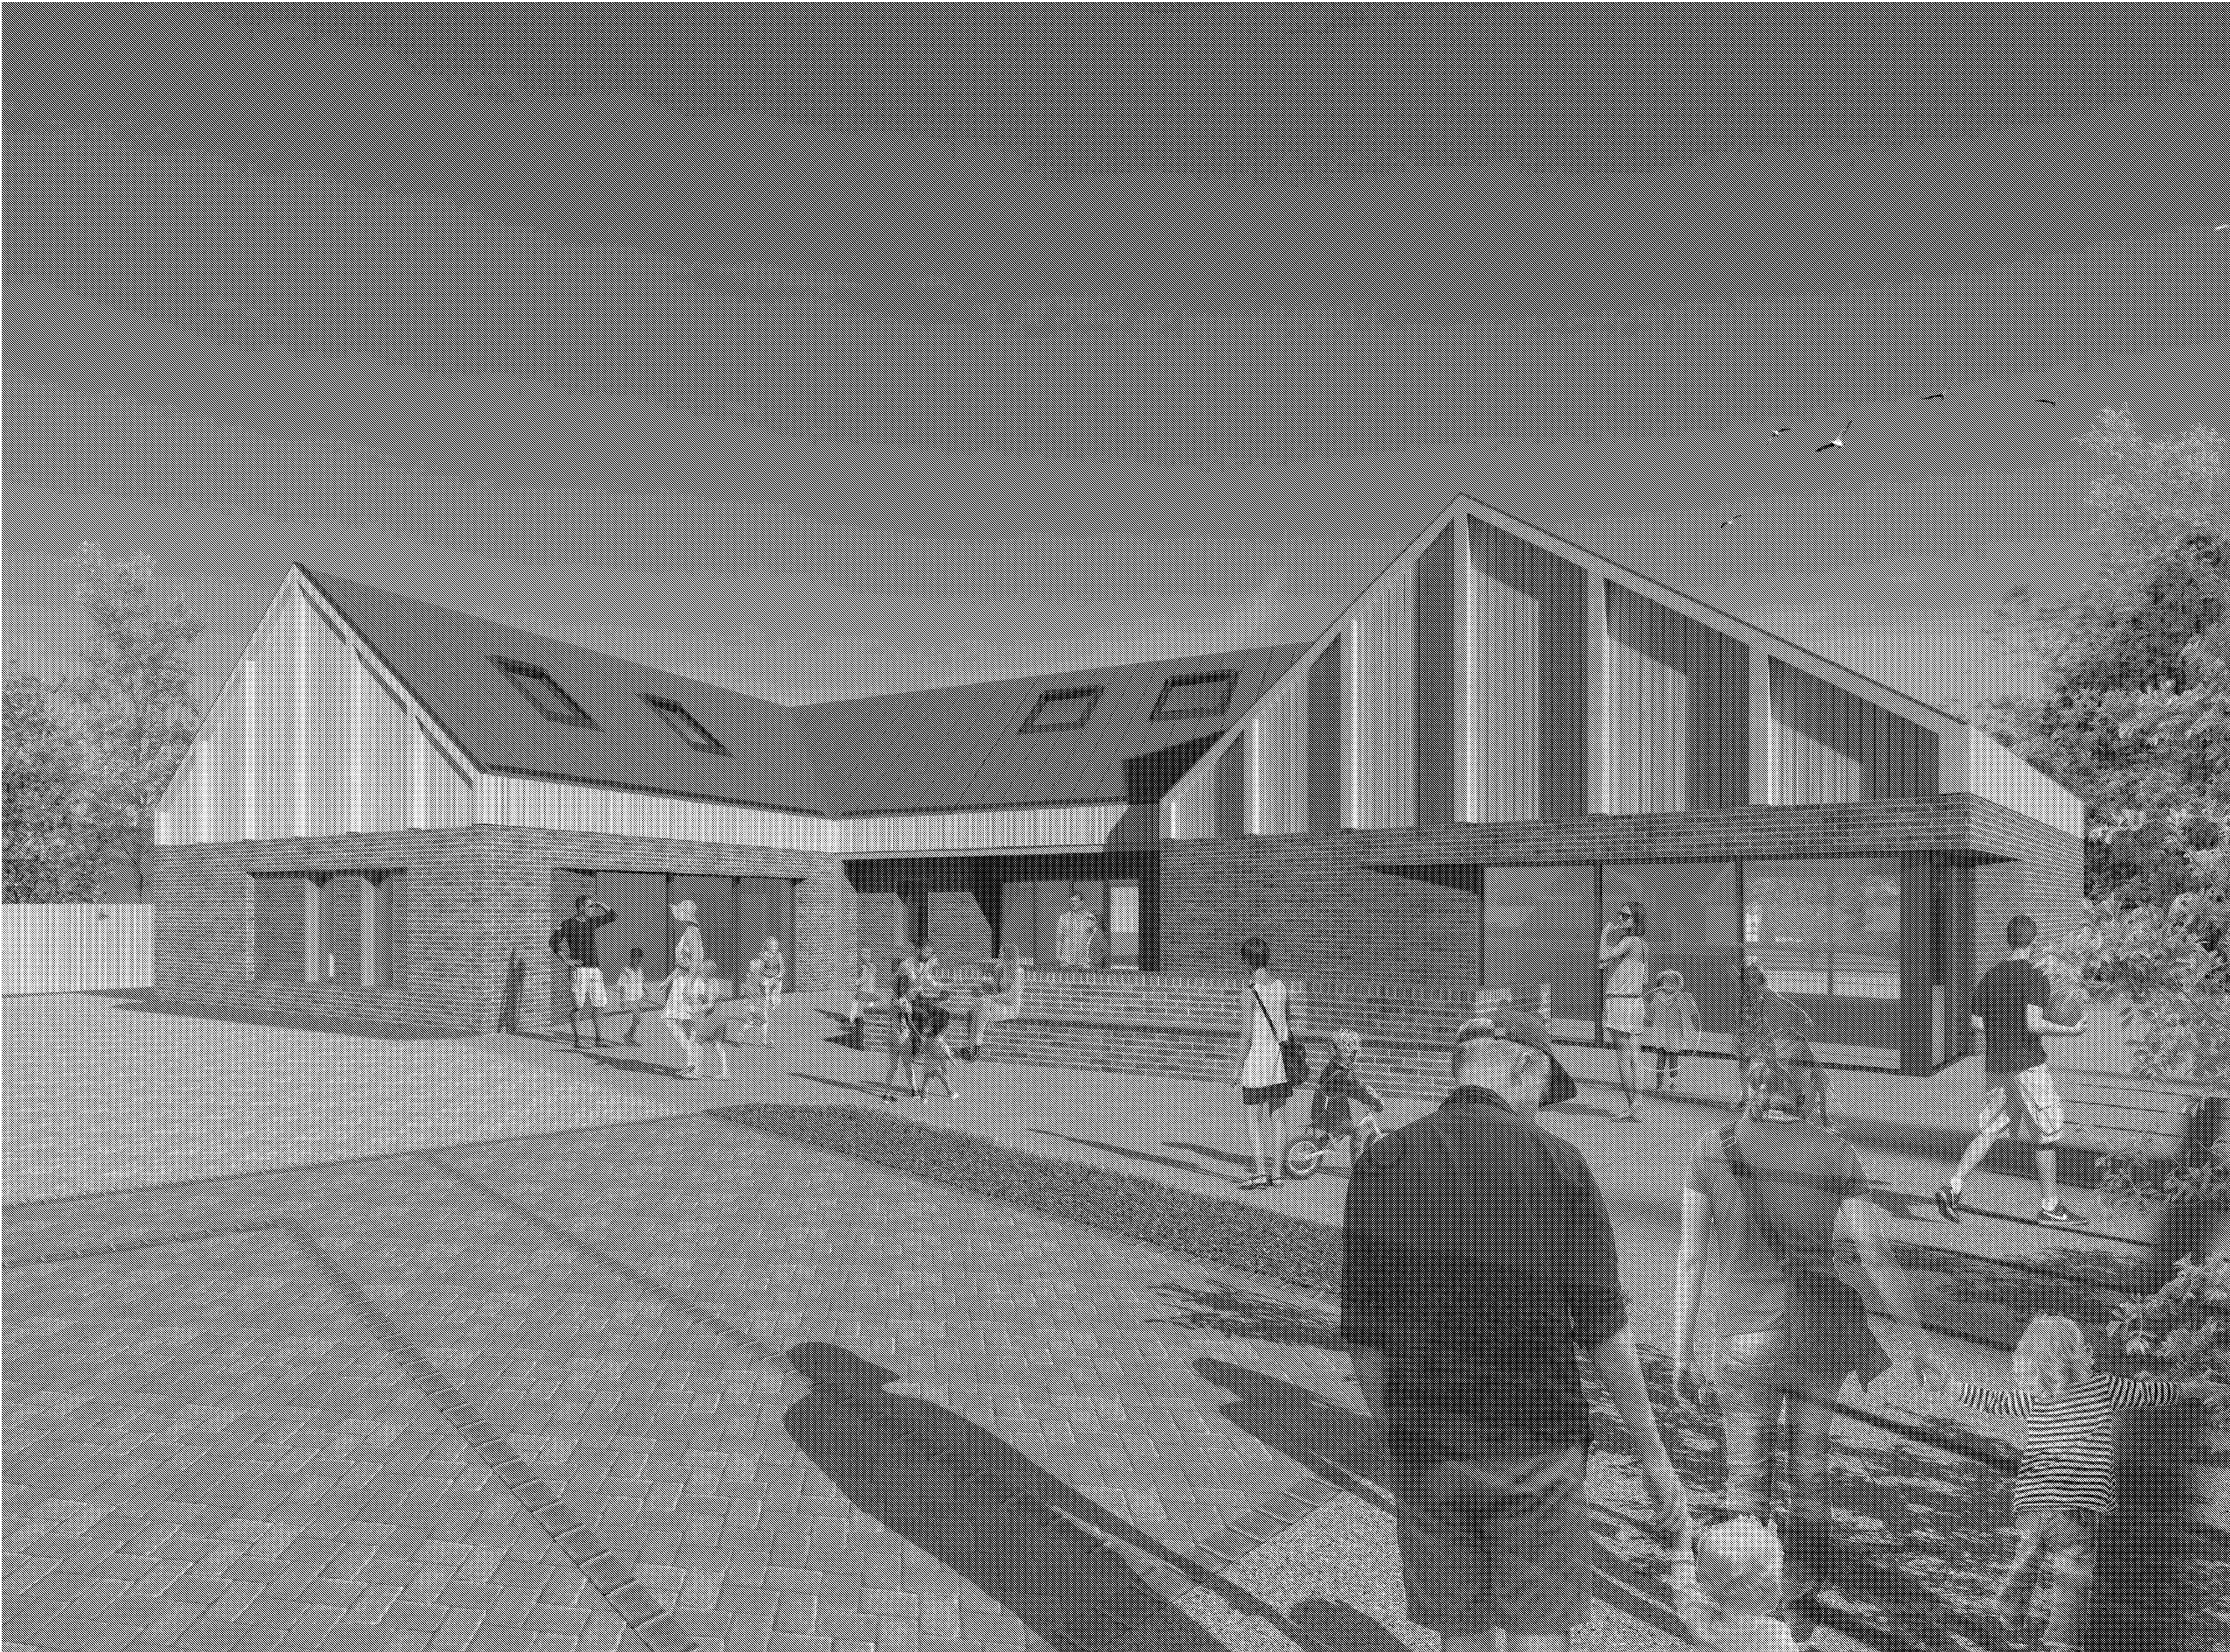